
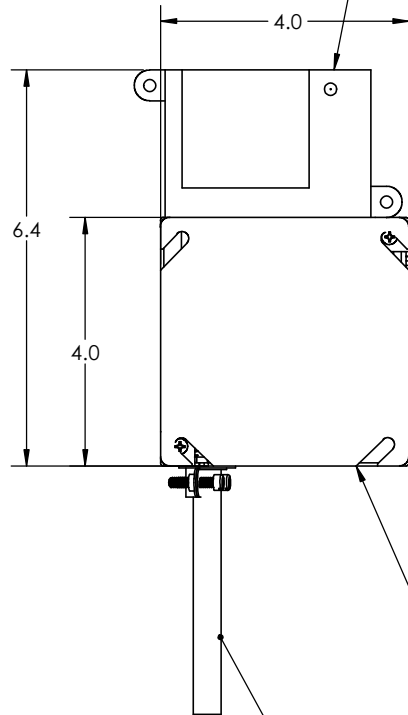


4


3

2

1

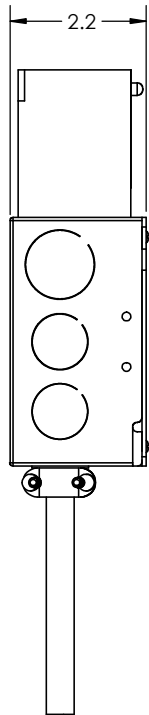


RELAY

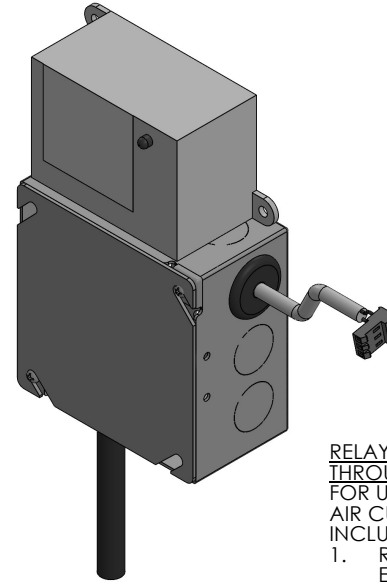RELAY CONTROL CABLE,
CONNECT 3 POSITION
CONNECTOR TO CONTROL
BOARDPOWER IN TO POWER SOURCE
120V-60 Hz. POWER IN CABLE NOT INCLUDEDPOWER TO AIR CURTAIN
120V 60 HZ.

RELAY KIT FOR ELECTRICALLY OPERATED DRIVE
THROUGH WINDOW
FOR USE WITH READY ACCESS RAC-22 AND RAC-22-E
AIR CURTAINS
INCLUDES:

1. RELAY FOR CONNECTION TO READY ACCESS
ELECTRIC CONTROL BOARD OR MOER BOARD
2. JUNCTION BOX PREWIRED WITH RELAY AIR
CURTAIN POWER CORD AND RELAY CONTROL
CABLE.
3. POWER CORD FOR AIR CURTAIN
4. CONTROL CABLE
5. MOUNTING SCREWS
6. WINDOW, AIR CURTAIN MOUNTING BRACKET
AND AIR CURTAIN ARE NOT INCLUDED

	NAME	DATE			
DRAWN	BCG		TITLE: WIRING DIAGRAM ELECTRIC WINDOW RAC22 RELAY		
CHECKED					
ENG APPR.	BCG				
MFG APPR.					
Q.A.					
			SIZE B	DWG. NO.	REV A
			SCALE: 1:4	WEIGHT:	SHEET 1 OF 3

4

3


2

1

B

A

RAC-22, ELECTRIC WINDOW RELAY CONNECTIONS

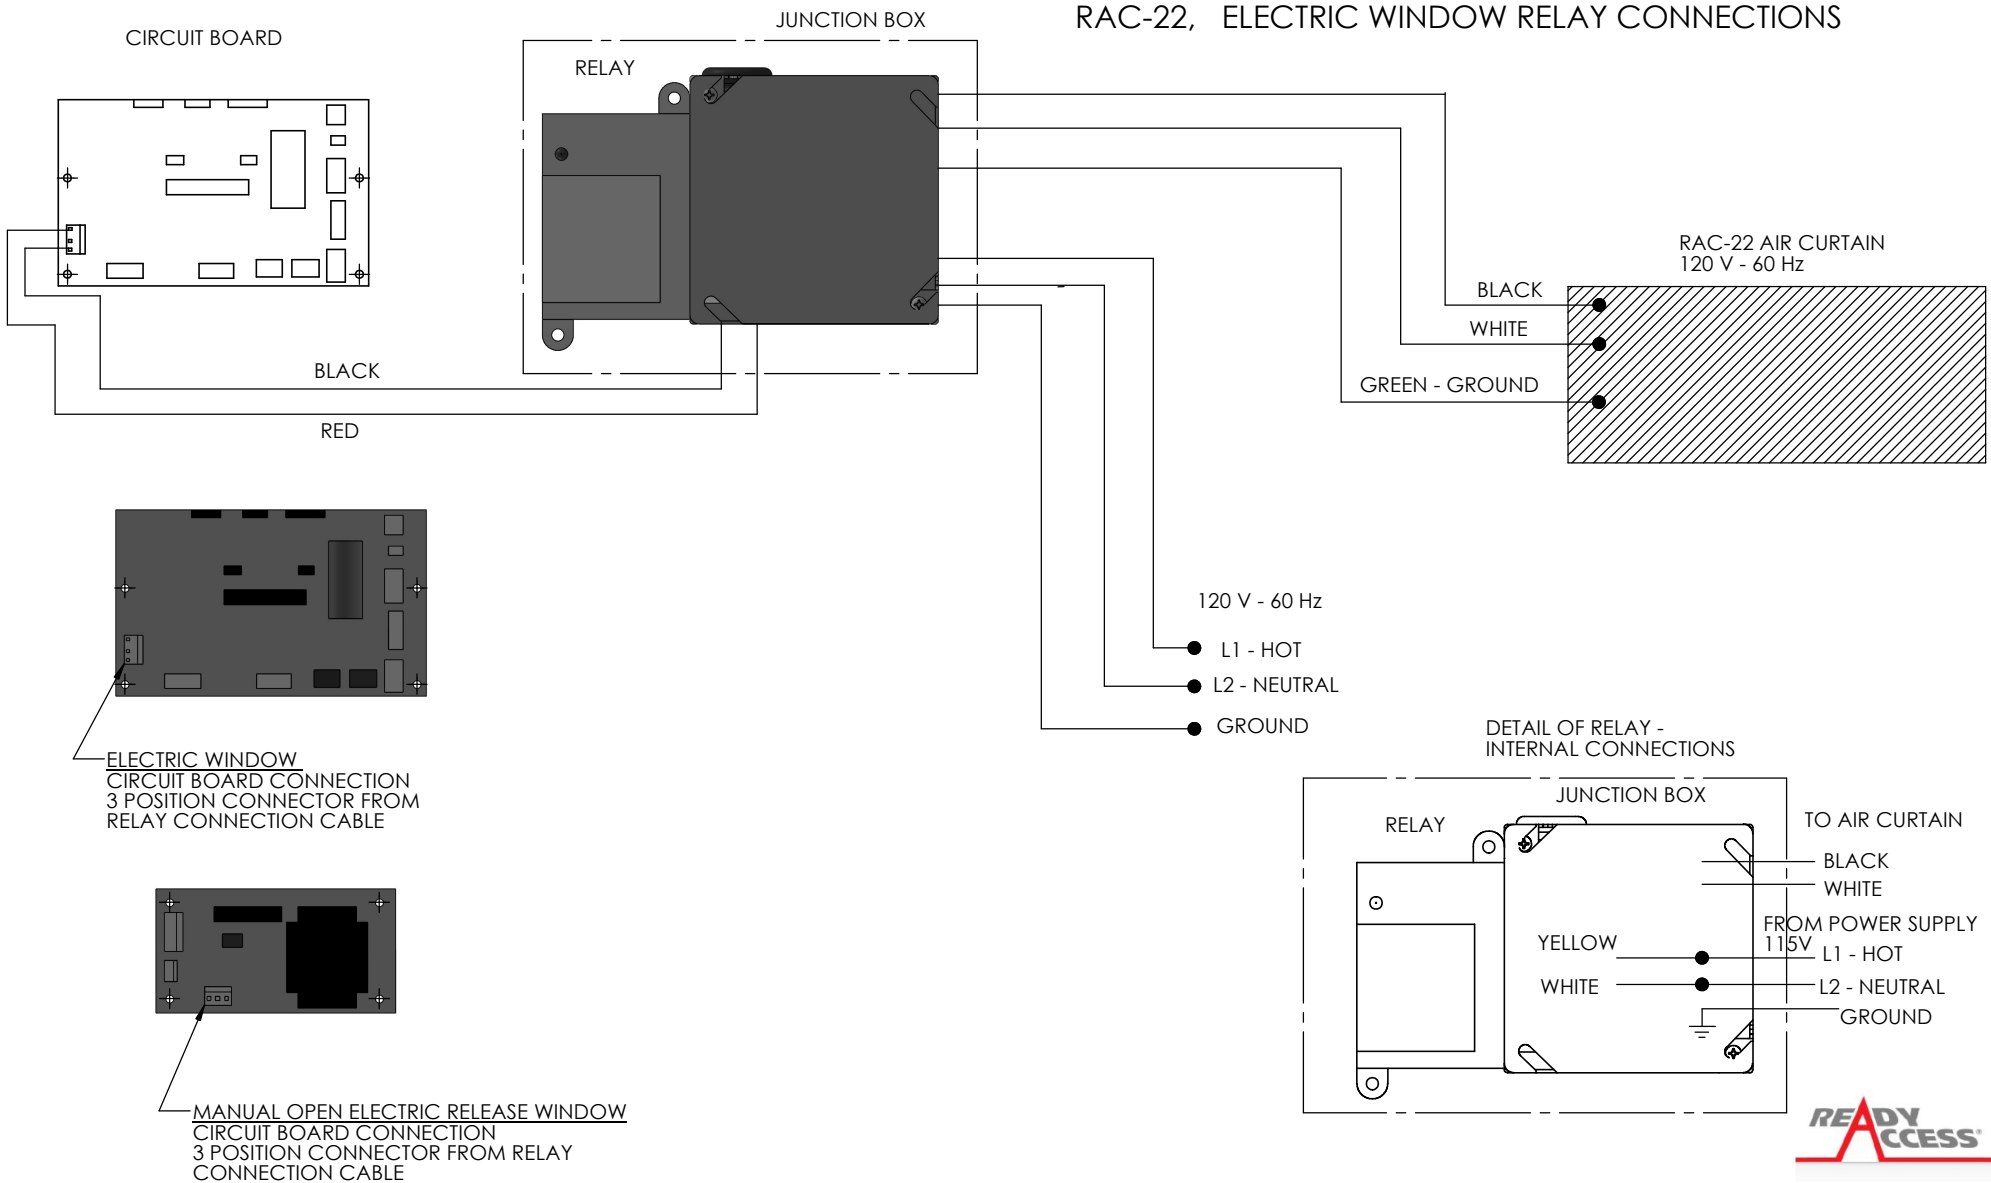

4


3

2

1

RAC-22, ELECTRIC WINDOW RELAY MOUNTING

RELAY

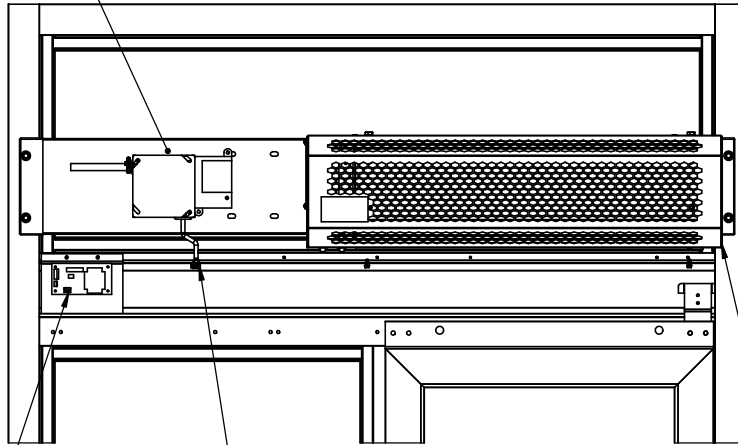


CONNECT TO CONTROL BOARD

MANUAL OPEN ELECTRIC CLOSE

CONTROL BOARD CONNECTION FROM RELAY

AIR CURTAIN

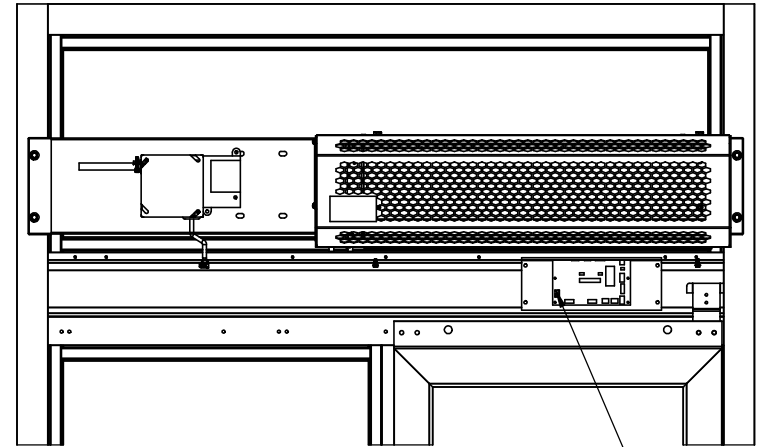

ELECTRIC OPEN AND CLOSE

CONTROL BOARD CONNECTION FROM RELAY

	NAME	DATE		
DRAWN	BCG			
CHECKED			TITLE:	
ENG APPR.	BCG		WIRING DIAGRAM ELECTRIC WINDOW RAC22 RELAY	
MFG APPR.				
Q.A.				
			SIZE B	DWG. NO.
			SCALE: 1:16	WEIGHT:
			SHEET 3 OF 3	
			REV A	

4

3

2

1

B

A