


CAUTION: ELECTRIC SHOCK HAZARD.

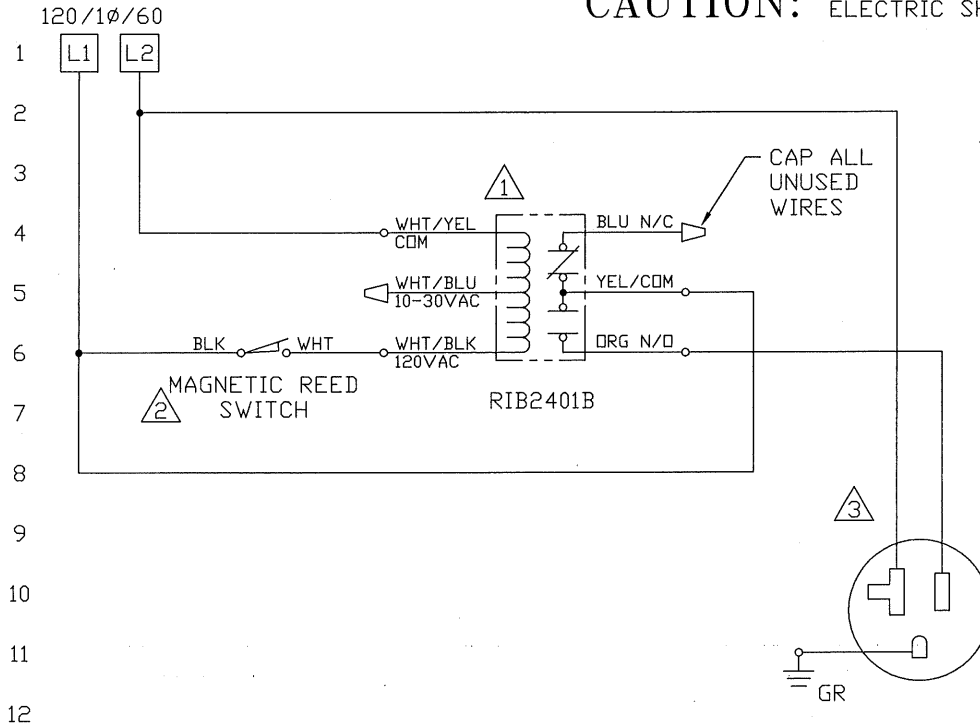

NOTES:

- ① MOUNT ASSEMBLY TO A CONVENIENT PLACE AND CONNECT L1 AND L2 AS REQUIRED BY WIRING DIAGRAM.
- ② MOUNT MAGNETIC REED SWITCH TO DOOR FRAME AND MOUNT MAGNET TO DOOR.
- ③ PLUG AIR CURTAIN INTO 20 AMP RECEPTACLE ON ASSEMBLY.

RIB2401B CONTACT LOAD RATINGS
20 AMPS @ 120-277 VAC
1 HP FOR 120-240 VAC
2 HP FOR 277 VAC

_____ FACTORY WIRING
 - - - - - FIELD WIRING
 # CONTINUED TO LINE #
 # TERMINAL STRIP

PROJECT		
LOCATION		
ARCHITECT		
ENGINEER		
DWG. NO.	114B11180	TITLE: WIRING DIAGRAM FOR RIB2401B RELAY & 120V MAG REED FOR DTU
DATE	17JUN13	
BY	B. Peffer	
REPLACES		
BY		BERNER INTERNATIONAL CORP. NEW CASTLE, PA.